


## 8 Zone expand module

### BP-ZEM08

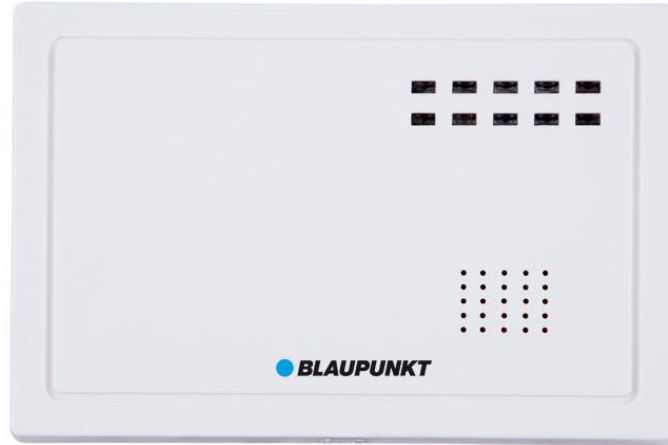

### Specification

- Module function: When the host alarms, the output port corresponding to the alarm zone on the module will be open or short circuited.
- Power indicator light: always on when powered on.
- Defense zone status indicator light: It flashes slowly when the defense zone is enabled and normal, and remains on when the defense zone malfunctions.

