

Product Datasheet

Wireless to wired module BP-WTW08Z-868



Specification

- Can code max 8 wireless device
- Wireless signal frequence: 433MHz / 868MHz
- Work voltage: 11.5 ~ 15.5V
- Work current: 33 ~ 39mA



Product Datasheet

Installation:

- 1. Open the cover;
- 2. Remove the PCB;
- 3. Put the base cover on the wall and point out where to drill hole for screw;
- 4. Remove the base cover and drill the hole on the wall;
- 5. Put the base cover to the wall, let the wire of the device which will connect to the repeater through the wire outlet hole and connect it to the repeater;
- 6. Fix the base cover on the wall by screw in screws;
- 7. Install the PCB back;
- 8. Cover the face case.

