

User Manual

Touch screen keyboard BP-KPLCD01




For Inquiries, Please contact:

Security Shop
Vladimira Popovica 6/6/A606
11070 Novi Beograd, Serbia
Tell: +381 11 318 68 68
office@securityshop.rs

Imported/Distributed by Security Shop doo
license of Blaupunkt
www.blaupunkt.com
Made in China


Enjoy it.

1. Appearance introduction

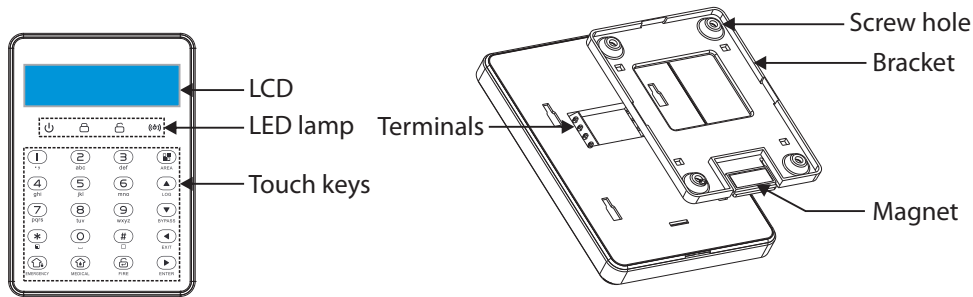

2. Wiring instructions


Please follow the wiring diagram below to connect.

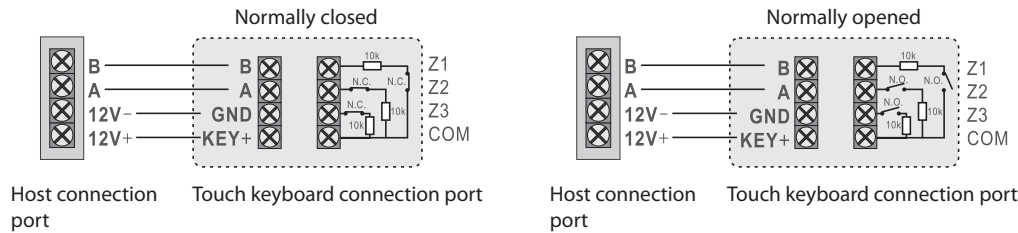

3. Keyboard address setting

When the keyboard is used for the first time, you need to set the keyboard address first. Long press "*" for three seconds to enter the keyboard address setting. Up to 16 keyboards can be added. Please refer to the actual number of keyboards that can be added to the host.

For example: add keyboard as address 07.

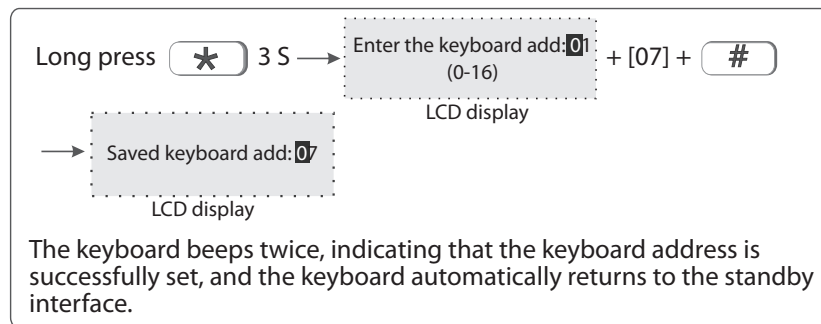

4. Function button

Icon	Meaning	Instructions
	Arm	The button can set arm multiple partitions at one time, and can also arm individual partitions separately. Press and hold for 3 seconds for emergency alarm
	Stay	The button can set multiple partitions to stay status, and can also set stay on a single partition. Press and hold for 3 seconds for medical care
	Disarm	The button can disarm for multiple zones, or disarm the individual zones individually. Press and hold for 3 seconds for fire alarm.
	Area	With Arm, Disarm, Stay to operate on a single Area.
	Up arrow	Upward selection; long press for 3 seconds to increase the volume; event record query
	Down arrow	Downward selection; long press for 3 seconds to decrease the volume
	Return key	Return to previous menu / exit menu
	Enter key	Enter options

5. LED lights

Icon	Meaning	Instructions
	Power Indicator	ON - normal power supply, Flash - AC power failure, Slow flash - battery failure, Off - AC and battery failure
	Arming Indicator	ON - all partitions in the management area, Flash - partition alarm, Slow flash - Partial arming and disarming of managed zones
	Disarm Indicator	ON - all administrative divisions are disarmed, Flash - The zone of the managed zone is faulty, Slow flash - Partition zones managed by bypass
	Fault Indicator	ON - configuration parameter check error, Flash - platform connection and communication failure, Slow flash - network, GSM, PSTN failures; Off - No failure

6. Wall mounting instructions

Size: (L * W * H including bracket) 141 * 100 * 19.5mm
Installation steps:

- Push down the bracket until it is loose and take it out;
- Connect the connecting wire to the host terminal;
- Fix the bracket on the wall with screws;
- Connect the keyboard at the position of bracket buckle and push the keyboard downward until it is clamped.

