






## User Manual

QUAD BEAM DETECTOR OUTDOOR  
BP-QPIR100L

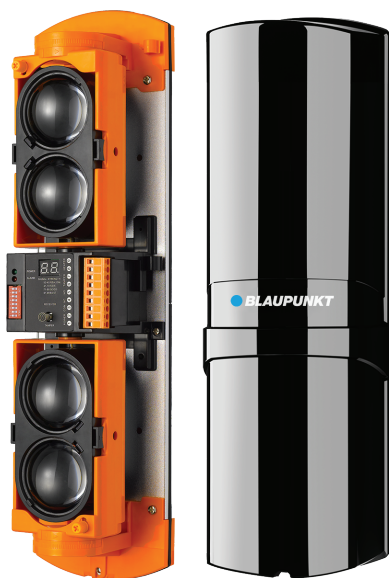

*Enjoy it.*


◆ Thanks for purchasing photoelectric quad beam detector, please read this user manual carefully before installation.

 <b>WARNING</b>	Do not use the product for purposes other than the detection of moving objects such as people and vehicles. Do not use the product to activate a shutter etc. which may cause an accident.
	Do not touch the unit base or power terminals of the product with a wet hand (do not touch when the product is wet with rain etc.) It may cause electric shock.
	Never attempt to disassemble or repair the product. It may cause fire or damage to the devices.
	Do not exceed the voltage or current rating specified for any of the terminals during installation, doing so may cause damage to the devices.
 <b>CAUTION</b>	Do not pour water over the product with a bucket, hose etc. The water may enter which may cause damage to the devices.
	Clean and check the product periodically for safe use. If any problem is found, do not attempt to use the product as it is and have the product repaired by a professional engineer or electrician.

**1.Features**


- Interruption time or walkspeed adjustable
- NO / NC relay outputs
- Integrated tamper switch, turns on when cover is moved.
- Frequencies selectable for long distance and stacking installations
- LED display signal grading for easy alignment
- Wide voltage power input:DC9~30V/AC9~20V
- “And” “Or” technology
- DIP switch for easy programming
- Waterproof grade: IP65
- Alignment angle horizontally  $\pm 90^{\circ}$  , vertically  $\pm 10^{\circ}$
- Digital filtering, high environment adaptability to eliminate false alarms
- Integrated heating function, reliable in cold/frost/fog weather.

**2.Part Description**

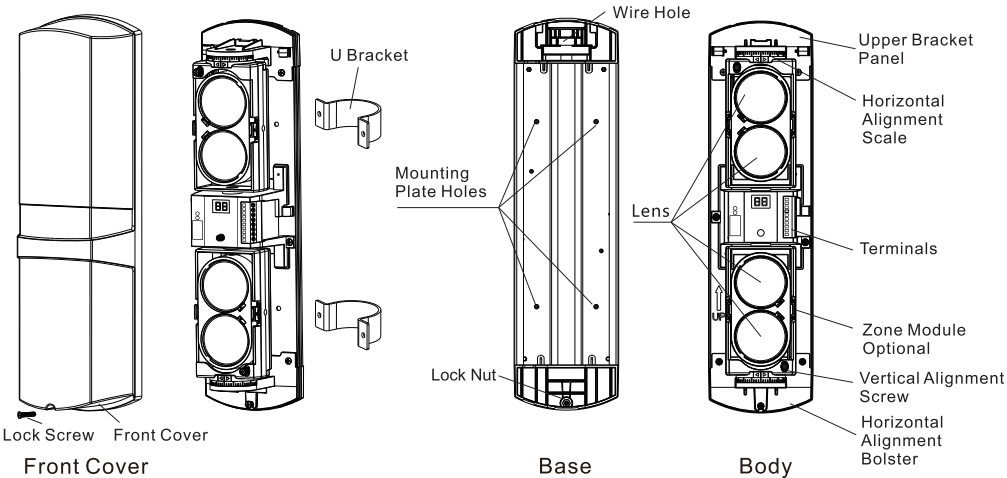


# 3.Installation Notes


(1).Please avoid below situations to assure performance

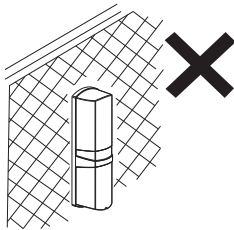


1.Do not install on an unsteady or moveable base

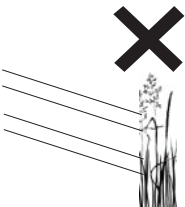


2.Do not install the unit where objects can block the beams like plants and laundry moving in the wind.

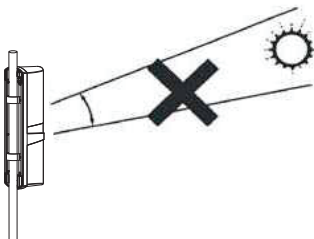


3. Prevent direct sunlight onto the RX OR TX  
NB! DO NOT POINT RX OR TX INTO DIRECT SUNLIGHT AS THE LENSES ACT AS A MAGNIFYING GLASS AND CAN CAUSE DAMAGE TO THE DETECTOR OR EVEN BECOME A FIRE HAZARD

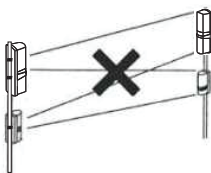

4.Avoid cross talk. Use frequency select (stack installation only for the same model)

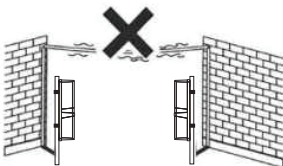

5.Avoid exposing wiring.

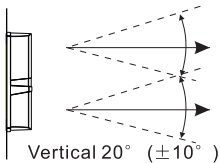


6.Make sure not to adjust vertical angle on RX & TX in to direct sunlight

(2).Normal installation


◆ Detection distance

Detection Distance	50m	100m	150m	200m	250m
Beam Angle	1.6m	2.0m	2.6m	3.4m	4.4m


◆ Mounting height

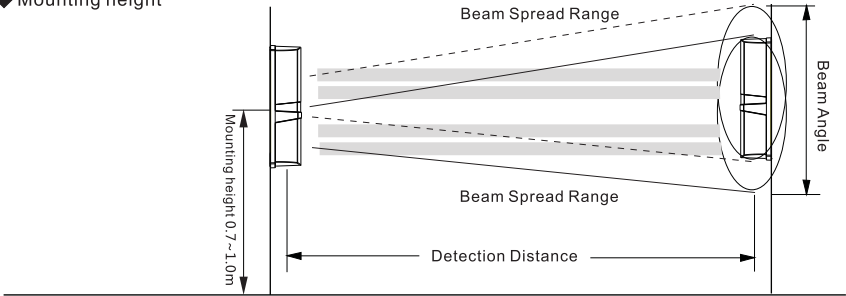

◆ Adjusting angle

 

Horizontal 180° (±90° )

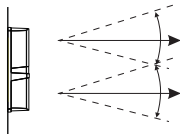


Vertical 20° (±10° )


Notice: For best testing results, please avoid testing in 45°

## 4.Setting Method


### ◆ Wall mounting

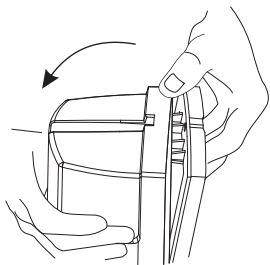


1. Loosen the screw and remove the cover

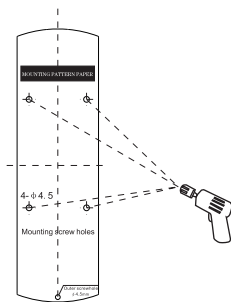


2. Attach the installation paper to the wall, mark the holes first and then make the guide holes.

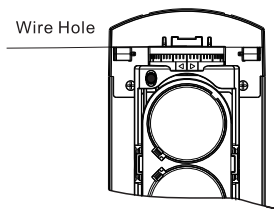


3. Wire hole: remove the foam plug, pull wire through, and reset the foam plug.

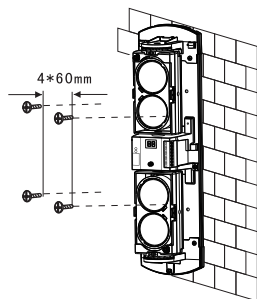

4. Attach beam to the base

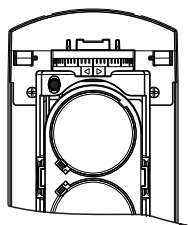


5. Connecting wires to the terminals (please refer to "beam alignment")

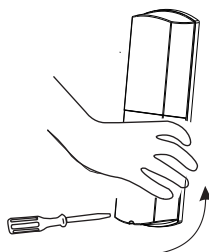


6. Review and reset the cover

### ◆ Pole mounting

 


Bracket Outer Diameter  
 $\phi 38 \sim \phi 50 \text{mm}$


1. Break out the wire hole and pull out the wires.

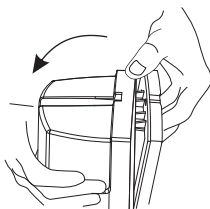


2. Remove the cover

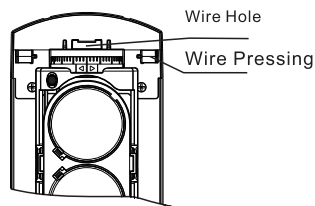

3. Drop into the holes with expansion pipe, then fix it with screws.

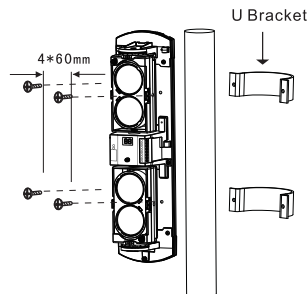

4. Fix the body on the bracket

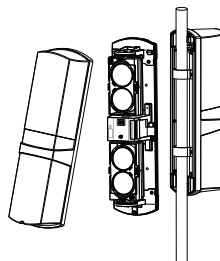

5. Back to back installation diagram, others please refer to the step 5 & 6 of the wall mounting method.




## 5.Connectors




Do not exceed the voltage or current rating specified for any of the terminals during installation.

Transmitter:

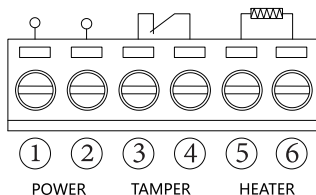

- 1 . Power input: DC9~30V/AC9~20V
- 2 . No heater in the package, please order if required.
- 3 . Tamper switch (NC) is independent of the circuit, anti-tamper trigger when cover is removed.


Receiver:

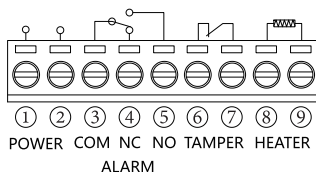


- 1 . Power input: DC9~30V/AC9~20V
- 2 . No heater in the package, please order if require
- 3 . Tamper switch (NC) is independent of the circuit, anti-tamper trigger when cover is removed.
- 4 . C relay (30VDC 1.0A max).

## 6.Connecting Wires

(1).Single connect: Control panel operating voltage DC12V, NC alarm output. Connecting to power supply parallel

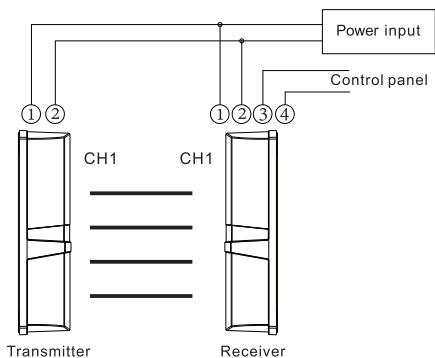

(2).Stacked connect: Control panel operating voltage DC12V,NC alarm output series connect

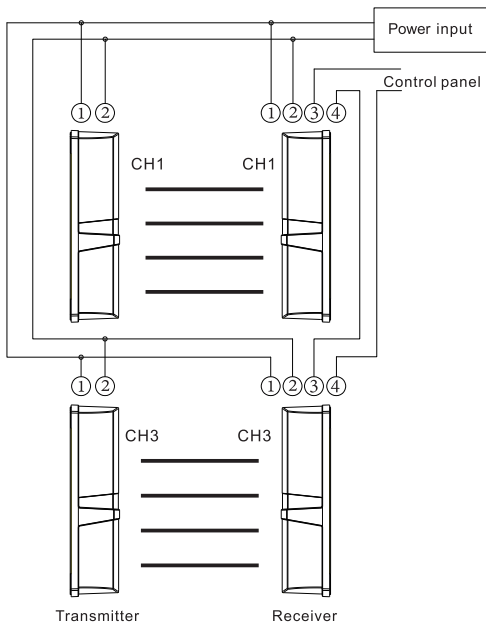

- ◆ Wiring distance between the power supply and the detector should not exceed the following table length.

Wire diameter \ Voltage	DC12V	DC24V
0.5mm <sup>2</sup> ( Φ0.8 )	100m	500m
0.75mm <sup>2</sup> ( Φ1.0 )	150m	750m
1.0mm <sup>2</sup> ( Φ1.2 )	200m	1000m
1.5mm <sup>2</sup> ( Φ1.4 )	250m	1250m




### Warning

- 1.The power wire can't exceed the listed length.
- 2.When connecting multiple detectors, the required cable length is divided by the corresponding number of units listed.
- 3.Don't connect the port with the voltage or current which is over the normal specification.

## 7.DIP Switch Explanations

- 1.DIP switch show on the left side of the main PCB, as shown in following figure.

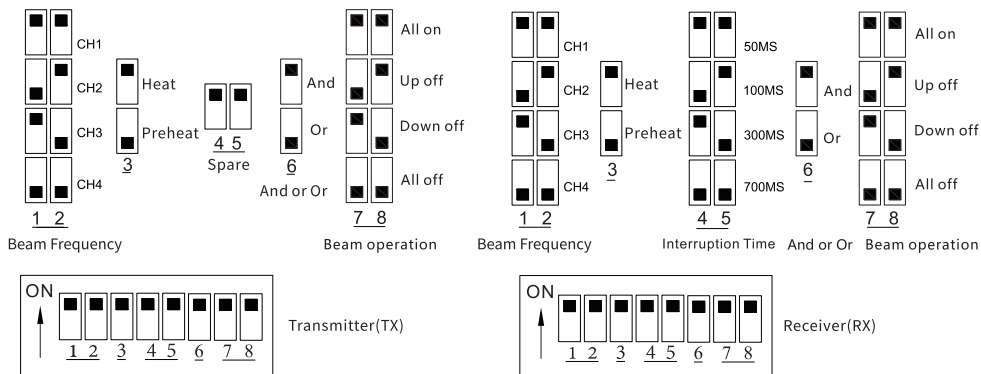

- DIP switches 1&2: Set beam frequency. TX and RX must be the same.
- DIP switch 3: Set heater. PREHEAT is for test. Must set HEAT when it's used.
- DIP switches 4&5: Set interruption time.
- DIP switch 6: Set "AND" or "OR" mode. "AND" means alarm activated if all 4 beams are blocked; "OR" means alarm activated if either upper/down 2 beams are blocked.
- DIP switches 7&8: Set Beam's working mode.
  - ALL ON: 4 beams on.
  - UP OFF DOWN ON: disable upper 2 beams.
  - UP ON DOWN OFF: disable down 2 beams.
  - ALL OFF: disable all beams.

**Notes:** All set must be the same on both TX and RX except 4&5 (4&5 on TX is spare)

### 2. Indicators



Receiver

#### POWER (Green)

- Indicator turns on if TX and RX are powered.




Transmitter

#### ALARM (Red)

- ALARM indicator is always lighting if alarm activated; It will be off during arming.




## 8.Optic Axis Adjustment

- 1.Set TX and RX same frequency by DIP switches 1&2.
  - 2.Set “AND” and “UP ON DOWN OFF” mode, adjust up 2 beams horizontally and vertically, it's ok when LED is “99”.
  - 3.Then at “UP OFF DOWN ON” mode, same set for down 2 beams
  - 4.Then set “ALL ON” and alignment finished
  - 5.Then do “walk test” to ensure it'll activate alarm normally.
- If failed, please re-do alignment. If alignment keeps failing, please refer to troubleshooting.

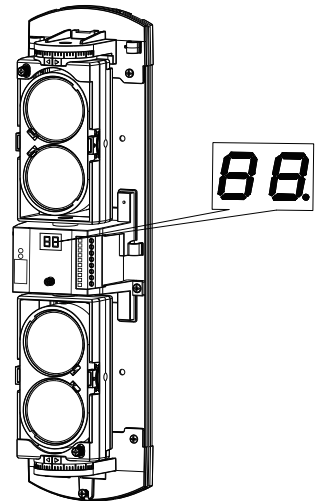

Signal strength	00~40 Realign
	41~70 Fair
	71~90 Good
	91~99 Best

## 9.Walk Test

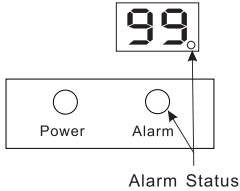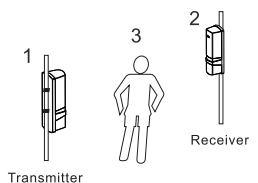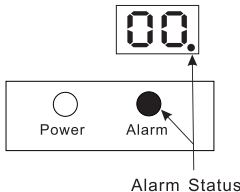 <p>Alarm Status</p>	<p>Please make sure the alarm indicator is off before testing. If not, redo the alignment.</p>
 <p>Transmitter</p> <p>Receiver</p>	<p>Please do the test at the 3 following positions</p> <ol style="list-style-type: none"><li>1. At the transmitter side</li><li>2. At the receiver side</li><li>3. In the middle</li></ol>
 <p>Alarm Status</p>	<p>Alarm indicator turns on when beam is interrupted, test finished successfully.</p>

Note: If the alarm LED indicator is OFF even though the beams are completely blocked, refer to the “Trouble Shooting”.

## 10.Troubleshooting


Symptom	Possible cause	Remedy
Power on, but power LED off	<ol style="list-style-type: none"><li>1. No voltage on power cable;</li><li>2. Broken circuit or short circuit;</li><li>3. Beyond specified voltage;</li><li>4. Power cable exceeds the specified length</li></ol>	<ol style="list-style-type: none"><li>1. Check PSU, voltage, cables and connectors</li></ol>
When beam is blocked, the alarm LED does not indicate, nor does the alarm relay switch	<ol style="list-style-type: none"><li>1. There is reflection or cross-talk from other transmitters</li><li>2. Walk speed set too long</li><li>3. Alarm output cable is shorted or damaged</li></ol>	<ol style="list-style-type: none"><li>1. Change beam path or change TX/RX frequency channel</li><li>2. Ensure 4 beams all blocked</li><li>3. Change walk-speed setting</li><li>4. Check receiver terminal and output cable</li></ol>
When beam is not blocked, alarm LED indicates activation	<ol style="list-style-type: none"><li>1. Beam is out of alignment; optical axis does not overlap</li><li>2. There are objects between TX and RX</li><li>3. Frequency is incorrect</li><li>4. The cover is dirty or capped by snow, frost and ice</li><li>5. TX is faulty or OFF</li></ol>	<ol style="list-style-type: none"><li>1. Adjust optical axis</li><li>2. Check objects between TX and RX</li><li>3. Ensure the frequency of TX and RX is the same</li><li>4. Clean cover or user heater</li><li>5. Check the voltage or wiring of the TX</li></ol>
False alarm	<ol style="list-style-type: none"><li>1. Bad wiring and fluctuant power voltage</li><li>2. Randomly blocked, like birds, paper or leaves</li><li>3. The beams base is unstable</li><li>4. Out of alignment</li></ol>	<ol style="list-style-type: none"><li>1. Check power, current and wiring</li><li>2. Change installation location</li><li>3. Strengthen installation base</li><li>4. Re-align</li></ol>

## 11.Specifications

Detection distance	Outdoor	100m
Detection method	3 options ( interruption of all 4 beams or upper 2 beams or below 2 beams )	
Interruption time	50ms,100ms,300ms,700ms(adjustable)	
Frequencies	4 different frequencies (selectable)	
Power and voltage	DC9~30V/AC9~20V	
Current consumption	80mA max	
Alarm cycle	≥1.5s	
Alarm output	1C. relay output (AC/DC30V, 1.0A max)	
Tamper	NC. works when cover is removed	
IP rating	IP65	
Operating temperature	-25°C ~ 55°C	
Humidity	95% max	
Correction angle	Horizontal 180°(±90°), Vertical 20°(±10°)	
Install location	Indoor/Outdoor ,Wall/Pole	
Weight	3000g	
Attachment	U bracket	4pcs, 70.4*37.5*21.5mm, δ=1.5mm, stainless steel
	Pole mounting screw	8pcs , PM4*30mm
	Wall mounting screw	8pcs , PM4*25mm
	Expansion pipe	8pcs, Φ7*27mm, green
	Installation paper	2pcs, W85*H220mm
Heaters (additional purchase)	Voltage	DC9~30V/AC9~20V
	Current	200mA max
	Temperature	+60°C
	Working condition	Auto Heating when it's ≤5°C and stop heating when it's ≥7°C

Note: When environment temperature lower than -20°C, please use heaters to ensure normal working.  
Heater is non-polarized.

## 12.Dimensions

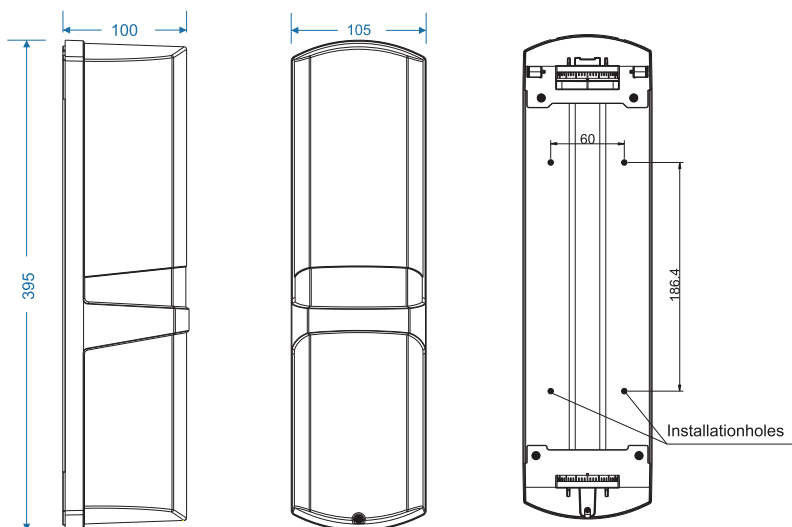

For Inquiries, Please contact:

Security Shop  
Vladimira Nazora 1,  
11077 Novi Beograd, Serbia  
Tell: +381 11 318 68 68  
[office@securityshop.rs](mailto:office@securityshop.rs)

BLAUPUNKT and the BLAUPUNKT logo are trademarks of  
TALISMAN BRANDS (Luxembourg) S.A.R.L. and are used under  
license from Talisman Brands, Inc.

BLAUPUNKT licensees are solely responsible for the BLAUPUNKT  
branded products manufactured, distributed and sold under license.  
[www.blaupunkt.com](http://www.blaupunkt.com)