For Inquiries, Please contact:


Security Shop doo
Vladimira Nazora 1, 11070 Novi Beograd
Tel: +381 11 318 68 68, www.securityshop.rs

BLAUPUNKT and the BLAUPUNKT logo are trademarks of TALISMAN BRANDS (Luxembourg) S.A.R.L.and are used under license from Talisman Brands, Inc.
BLAUPUNKT licensees are solely responsible for the BLAUPUNKT branded products manufactured, distributed and sold under license.
www.blaupunkt.com

BLAUPUNKT


User Manual

WIRED KEYPAD
BP-KPLCD02

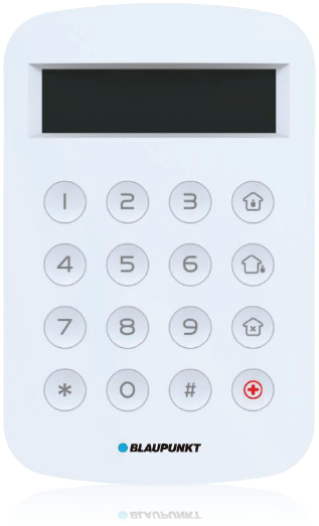

Enjoy it.

1.Appearance display

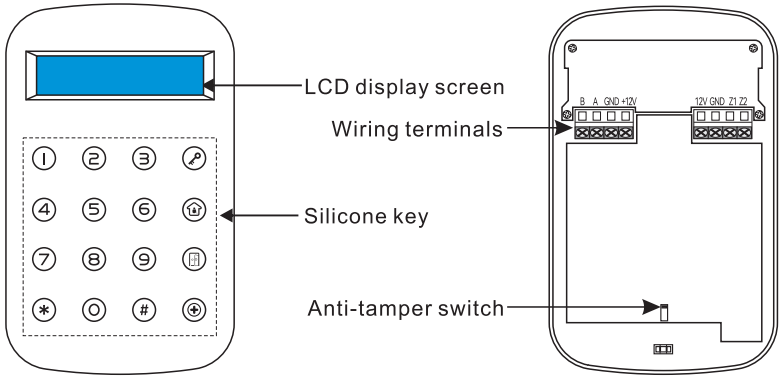

Front view　　Internal diagram

2. Disassemble


Before connecting the keyboard wires, please disassemble the screws on the bottom shell first, and separate the bottom shell from the face cover.



The bottom of the keyboard

3. Wiring

Please follow the wiring diagram below for wiring.

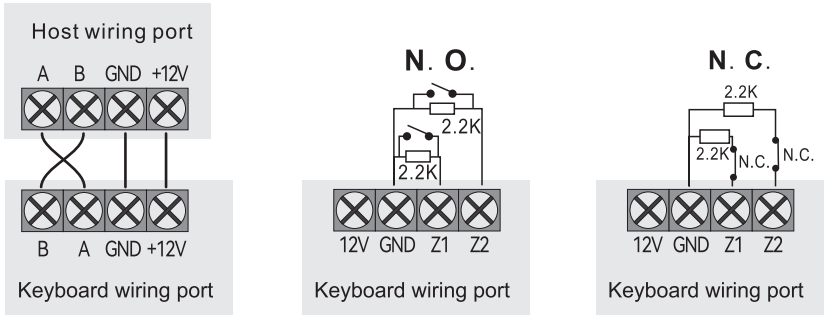

When the keyboard address is 1, Z1 and Z2 respectively correspond to the defense zones as the 9th defense zone and the 10th defense zone. If multiple wired keyboards are connected, the defense zone numbers will be arranged backward according to the serial number of the keyboard address.

P/N:24160704B04

4. Key Description

Icons	Meaning	Explanation
	Deployment/ Return key	Deploy defense in zones; Return to previous menu/exit menu
	Left/Up key	Set up defensive positions in the partition; Select upwards; Long press for 3 seconds to increase volume
	Disarm/ Down arrow	Dismantle the zone defense; Select downwards; Long press for 3 seconds to decrease volume
	SOS/ Confirm key	In the standby state, press and hold for 3 S for emergency alarm;after entering the engineering settings,it serves asthe confirmation key.
1	No.1	—
2	No.2, abc	When inputting text, pressing repeatedly can switch between "2abcABC"
3	No.3, def	When inputting text, pressing repeatedly can switch between "3defDEF"
4	No.4, ghi	When inputting text, pressing repeatedly can switch between "4ghiGHI"
5	No.5, jkl	When inputting text, pressing repeatedly can switch between "5jklJKL"
6	No.6, mno	When inputting text, pressing repeatedly can switch between "6mnoMNO"
7	No.7, pqrs	When inputting text, pressing repeatedly can switch between "7pqrsPQRS"
8	No.8, tuv	When inputting text, pressing repeatedly can switch between "8tuvTUV"
9	No.9, wsyz	When inputting text, pressing repeatedly can switch between "9wsyzWSYZ"
0	No.0	When entering text, repeatedly press to switch between " 0 " and spacebar
*	Settings key	—
#	Confirm key	Enter Options

5. Common keyboard operations

The default password for the system administrator is 012345, and the main user password is 1234.

To improve system security, please change the password in a timely manner and keep it properly.

Enter engineering settings: 012345 * 0#

Restore factory settings: 012345 * 9#

Display system version: * 1#


View host IP address: 012345* 1 #

Keyboard key tone adjustment: In standby mode, long press / , and the keyboard will make a "beep" sound to increase/decrease the volume by one.

Forgot password: Within 1 minute of system startup, enter 000000 * 0 # on the keyboard to log in and fix the user's forgotten password.

6.Keyboard address settings

After connecting the new keyboard, the keyboard shows that the address has not been set. Please disarm and long press " * " in standby mode for three seconds to enter the keyboard address setting. Up to 8 keyboards can be added. For example, add the keyboard to address 07.

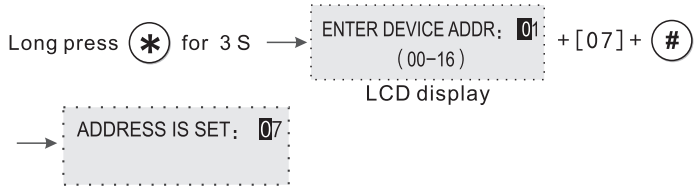

The keyboard emits two beeps, indicating that the keyboard address has been successfully set and the keyboard automatically returns to the standby interface.

Please connect the keyboard when the host is powered off. You can connect 8 keyboards. Connect the keyboard and power on the host before scanning and adding it. If the keyboard is added without power off, it will not be scanned by the host and will not work. Different keyboards require different addresses to be set, and after setting, they need to be powered off and restarted to take effect; When the keyboard is first connected and turned on, the display screen will indicate the type of fault, such as battery not connected, network disconnected, etc.