HYUNDAI


IP Video Outdoor Station HYU-IN-IVI001

USER MANUAL


IP Video Outdoor Station HYU-IN-IVI001


User Manual

HYUNDAI

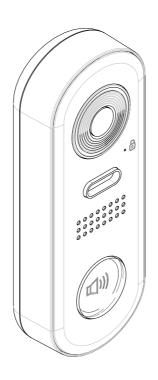

1.Parts and Functions

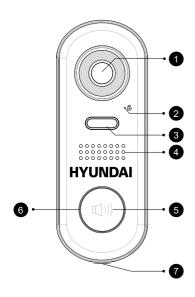


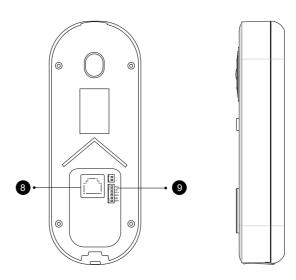



- 1 Camera Lens
- 2 LED_LOCK
 Indicates unlock status.
- 3 LED_CAM Indicates monitoring status.
- 4 Speaker
- **Call button**Press to call the indoot station(residerent).


- 6 LED_KEY
 Indicates monitoring, calling, unlock status.
- Microphone
- 8 Lan connector
 Use to connect the door station to the network.
- 9 Terminal connector
 Use to connect external devices to the door station

2.Mounting

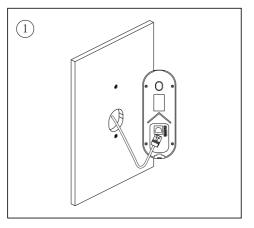

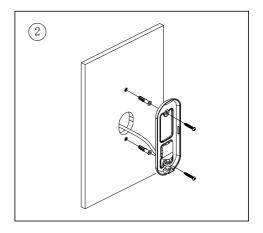

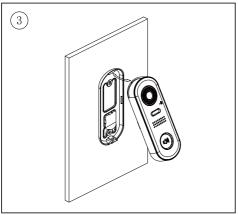

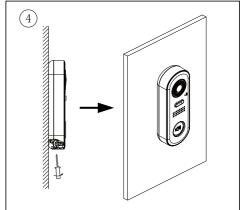


- 1. Installation height for door station usually is 145~160cm.
- 2. Use screws to fix the back panel to the wall after connect the cable correctly.
- 3. Attach the front panel to the back panel, then use the screw to fix it.

3. Electric Lock Connection

Door Lock Controlled with Internal Power

Note:

- This mode only supports electromagnetic locks.
- Electromagnetic lock of Power-off-to-unlock type should be used.
- The door lock is limited to 12V, and holding current must be less than 250mA.
- The Unlock Mode Parameter of Monitor must be set to 1 (by default).




set to Normally open on the Unlock Relay mode

Door Lock Controlled with Dry Contact

Note:

- The external power supply must be used according to the lock.
- The inside relay contact is restricted to AC or DC 24V/1A.
- Setup the **Unlock Mode** of Monitor for different lock types.
 - Power-on-to-unlock type:Unlock Mode=0 (by default)
 - Power-off-to-unlock type:Unlock Mode=1

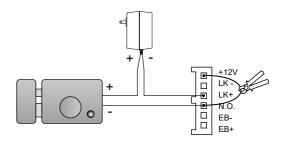

set to Normally Open on the Unlock Relay mode (default)

4. Door station operations

Call button bind in Villa

Connect all devices and power on:

On indoor station(IX471)

- 1. From the main menu, tap "Setting" icon.
- 2. Select "Ext.Unit", and then tap "Auto setup wizard" item.

Door statin will be rename and call button will be binded to this monitor

Call button bind in Appartment

Connect all devices and power on:

On indoor station(IX471)

- 1. From the main menu, tap "Setting" icon.
- 2. Select "Ext.Unit", and then tap "Enter OS binding" item.

On door station

- 1. Power on the door station.
- 2. Press and hold the *call button* 10s.
 - -LED_CAM will flash once in the 5th second, and flash again in the 10th second.
- 3. The binding is successful.

Calling a residerent

Press the Call button to call.

Status check

Press and hold the Call button 5s.

-LED CAM will flash once.

The status prompts are as follows:

LEDs Status	LED_LOCK	LED_KEY
SIP registered ok	Fast flashing	
SIP registered error	Normal flashing	
SIP disabled/Not connected	off	
My master IM found		Fast flashing
Other IX devices online,but master offline		Normal flashing
No other IX device detected		off

5. Specifications

• Power Source: Power-over-Ethernet (IEEE 802.3af Class 0)

LAN Interface:
 10 BASE-T / 100 BASE-TX Ethernet (RJ-45)

Camera: Type 1/3.7" Ultra Sense, ISP with 77dB WDR

Len angle: 170 degree with Fisheye correction

Minimum illumination:
 5 lux

Wire Type: Cat-5e or Cat-6

• Wiring Distance: 100m (Approx. 330')

• Operating temperature: -10 to +50 (oC)


Protection: IP65;

• Dimension: 160(H)×60(W)×31.5(D)mm

6. Precautions

- Please clean the unit with soft cotton cloth, don't use the organic impregnant or chemical clean agent. If necessary, please use a little pure water or dilute soap water to clean the dust.
- The unit is weather resistant. However do not spray high pressure water on access control keypad directly.
 Excessive moisture may cause problems with the unit.
- You must use the right adaptor which is supplied by the manufacture or approved by the manufacture..
- Pay attention to the high voltage inside the products, please refer service only to a trained and qualified professional.

7. Single family wiring

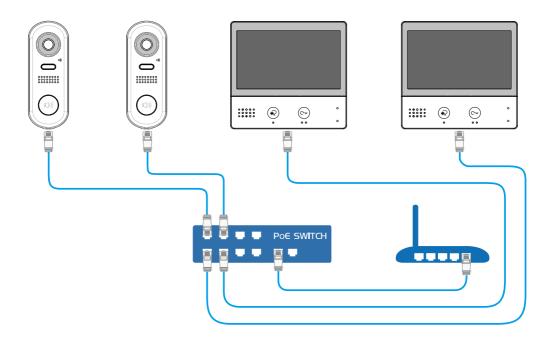



For Inquiries, Please Contact:

Security Shop Vladimira Popovica 6/6/A606 11070 Novi Beograd, Serbia Tell +381 11 318 68 68 office@securityshop.rs

Imported/Distributed by Security Shop Doo Licensed by Hyundai Corporation Holdings, Korea Delivery and After Service shall only be covered within Serbia