




User Manual

Wireless Siren With Sound and Flash Light BP-WISIR01-868

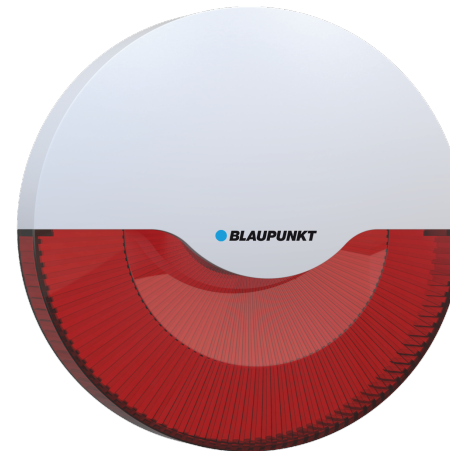

For Inquiries, Please contact:


Security Shop
Vladimira Popovica 6/6/A606
11070 Novi Beograd, Serbia
Tell: +381 11 318 68 68
office@securityshop.rs

Imported/Distributed by Security Shop doo
license of Blaupunkt
www.blaupunkt.com
Made in China

Enjoy it.

1. Introduction

BP-WISIR01-868 wireless siren with sound and flash light is the alarm equipment has compatibility, it forms its power supply by the adaptor self-taking and the stand by battery; communicate with the wireless control panel in the form of wireless. It can be used in the alarm system realize the alarm function by sound and flash light, and it also can realize the function of alarm and disalarm answer. This siren has the tamper function, it also can be used together with control panel, magnetic switch, emergency bottom and so on, to fealize the function of wireless prolong. At the same time, it has the function of high sound for frightening. With beautiful out look and high sound, it fit for to be installed in porch, window, and also good for family, office and market using.

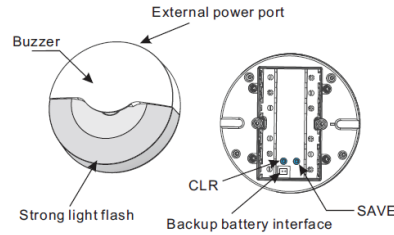

2. Technical parameter

- External power supply: DC5V/1A (output current $\geq 500\text{mA}$)
- Internal power supply: 3.7V / 2000mA rechargeable lithium battery
- Standby current: $\leq 35\text{mA}$ (without connect the backup battery)
- Alarm current: $\leq 350\text{mA}$ (without connect the backup battery)
- Frequency: 433MHz/868MHz (optional)
- Receiving distance: $\geq 60\text{m}$
- Volume: 110db@1m

3. Installation sketch

3.1 Battery installation

1. Please connect the battery before use the siren as below, remove the battery cover at the bottom.

2. Connect the battery as figure and close the battery cover

3.2 Installation base

2-4.8m above the basement

A. means point for drilling
B. Input nail and tighten it by screw on the wall.


3.3 Siren installation

Fix the tooth of the siren to the hole of the base, after installation finished, push it emphatically, when finished, please confirm if the installation is stable.

4. Technical specifications


4.1 Coding

Press save button and hold on, at the meantime to trigger the wireless device until there is alarm output on the BP-WISIR01-868 siren. There are max 60 wireless device can code to BP-WISIR01-868 siren, include the alarm panel, wireless detector, and remote. All the wireless device will trigger the siren when make alarming.

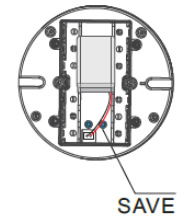

4.2 Delete code

Press the SAVE and CLR button at the same time and hold on, then the blue led will light on for about 3s, then slow flash for 10 times, then fast flash to light on or light off. Finish delete coding.

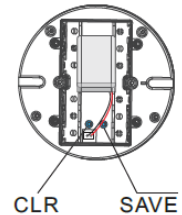

4.3 The communication with alarm control panel

After the siren code to the alarm control panel successfully. When the alarm control panel make alarm, the siren will whistle for two and half minute. If the alarm panel with the arm, disarm indication function. When arm, disarm on the remote, the siren BP-WISIR01-868 will whistle for 2 times and flash for 3 times.

4.4 Communication with wireless detector

The siren BP-WISIR01-868 can work with wireless detector and remote alone. After the BP-WISIR01-868 code to the wireless detector and remote the BP-WISIR01-868 will whistle when detector alarming or arm, disarm on the remote (Note: fuser want to set the wireless detector work with BP-WISIR01-868 directly, please code a remote to the siren to arm, disarm. There is no switch on the siren to arm, disarm).

After code the remote to the BP-WISIR01-868

- When press the arm key on the remote, BP-WISIR01-868 will whistle for 5 times, and flash for 6 times.
- When press the arm key on the remote, BP-WISIR01-868 will whistle for 2 times and flash for 3 times.
- When press the panic key on the remote, BP-WISIR01-868 will make alarm whistle.

Note: Press the home arm key on the remote will not trigger the BP-WISIR01-868.

