

**Product Datasheet** 



# X-RAY BAGGAGE SCANNER BP-XR6040

# Product highlights ▼

- \* Linux operation system
- \* ARM cpu
- \* Digital signal and processor
- \* Continuous working 10000 hours above
- \* Energy saving design
- \* High penetration
- \*Good quality images
- \* One key turn off





#### **Product Datasheet**



### **Product Details**

#### ₹

### **General Specifications**

Wire Resolution Typical AWG40
Penetration resolution Typical AWG32

Spatial resolution Vertical: 1.0mm, horizontal: 1.0mm

Penetration Typical 8mm

Resolution of organic matter /

Tunnel size 600(W)\*400(H) mm

Resolution of inorganic objects

Effective material resolution  $\leqslant 3.5 \mu Sv (uGy)$ X-Ray dosage each inspection  $\leqslant 0.5 \mu Sv /h(uGy/h)$ 

Boundary Leakage <60dB
S/N ratio 0.2m/s
Conveyor speed 100kg
Conveyor max load 0.5KW

Power consumption Meet the requirements of GB15208.1-2005
Safety performance requirements

Meet the requirements of GB15208.1-2005
EMC requirements

Meet the requirements of GB15208.1-2005
Electrical safety

Meet the requirements of GB15208.1-2005

Environmental applicability <5.0mA

Leakage current Guarantee ASA/ISO1600 Film

Film Safety 260kg

Weight

Operation temperature/Humidity

Storage temperature/Humidity

5℃-40℃/0%-90%

-20℃-60℃/10%-90%

86kPa-106kPa AC

Atmospheric pressure 220V(±10%-15%)50±3Hz

Operation Power LINUX

Operation system

#### **General Specifications**

X ray generator 80KV, oil cooling, from bottom to top


Electric roller Direct current

Computer Hard drive: 500G, Storage: 1G

Monnitor 21.5" LED screen, resolution: 1280\*1024 pixels

Operation console Single screen console

## Scanned images

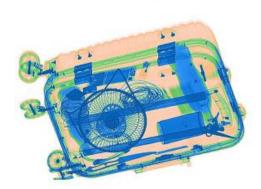







#### **Product Datasheet**



#### **Functional characteristics**

Software registration

Power-on self-test With the function of fault self-check, automatically judge the fault and prompt the fault code information in time.

1-64times enlargement continuity. Image processing

With the function of Color/BW, negative, high/low penetration, organic/inorganic stripping,

general enhancement, and pseudo color, etc.

Image Recall 30 preceding images recallable.

The number of images stored Up to 10,00 images stored automatically.

The real-time curve can be used to detect whether the acquisition system and components work normally. Real-time curve

System time can be set Time setting

It can realize the manual deletion of the low and low energy detection board dead pixels, Probe setting

and display the deleted dead pixels in the display area.

There are two source and analog source control modes, the source parameters of the digital source can be set. Ray source setting

The alarm function can be activated and deactivated, and the alarm type of the alarm box, Alarm system

sound and light alarm can be selected, and the sensitivity, minimum absorption rate,

maximum absorption rate, and alarm duration can be set.

It can realize whether the components such as the entrance and exit light barrier, side panel switch, emergency Troubleshooting

stop switch and light source are normal, and display the standard value and current value of the detection voltage

The drum running control direction and the image display moving direction can be set. Image setting It can realize software registration function and has serial number, registration code,

registration status and system time information display.

User login Log in by entering different user name and passwords, only when logging in can you make other settings.

User management You can add, delete, edit the user name and password, set the user level to restore the deleted user.

Authority management Different default permissions can be set according to user level.

language settings The system language can be set to switch between Chinese and English.

Log management User operations can be monitored to query user actions.

About The version and device number can be displayed.

TIP report The report can be generated by the tip operation after the tip insertion function is turned on, and the

content of the report: user name, number of tip insertions, number of tags, false positive rate,

probability of detection, probability of false positives.

Tip management It can be set to enable and disable the insertion of dangerous goods, and can set the identification time,

Prompt time, insertion frequency, proportion of single items inserted into dangerous goods, add tip files

and delete files.

Document management It can query, open, and export the checked image.

Function setting It can set log level, save the file time, whether to open the training function and setting the smart roller. Data setting

Display system working hours, the total working hours of the ray source, the total number of system

baggage and packages, and the total number of baggage packages this time, and clear the above data.

connection to realize sharing function, and have corresponding software to achieve system upgrade.

System parameter setting It can select the exported data, pictures, and backup directory, select and adjust the motor type, detector

type, whether to enable the debug mode, model, and gain, enter the corresponding IP address on network

Compliance

\*ISO19001; SO14001; ISO27001; OHSMS18001; CE, ROHS, FCC, REACH, USA, FDA

International